

The Membrane Contactor that you have purchased can be damaged through improper handling and storage. The following guidelines are intended to provide a framework for successful storage of these contactors. If you have any questions, please contact your Membrana representative.

Handling. Proper handling of contactors is critical. Care must be taken not to hit or jar (shock) the contactor to minimize the possibility of internal damage. It is recommended that the contactors be stored in a dry, heat-sealed plastic bag or shrink wrap material [0.076 mm (0.003 in.) wall thickness] in their original box to prevent the introduction of contaminants into the contactor.

Temperature. Store the contactor dry in their original boxes at temperatures not to exceed 49°C (120°F). Contactor stored at very low temperatures < 5°C (41°F) should be allowed to equilibrate to room temperature prior to introducing water.

Humidity. It is recommended that contactors be stored at low to moderate humidity levels (< 60% relative humidity). Humidity will not affect the components of the contactor but exposure at high humidity levels may affect the integrity of the cardboard boxes.

Storage Position. Store the contactors in the horizontal position.

Shelf Life. Membrane samples from contactors stored for 4 years (room temperature, low to moderate humidity, heat-sealed bag but not stored in a box) have shown no changes in physical properties (hollow fiber tensile strength and elongation).

Exposure to Sunlight. Contactors should not be stored where they are exposed to direct sunlight. Contactors should always be stored in sealed bags, or shrink wrap material, in the original box or other opaque box.

MiniModule®
MEMBRANE CONTACTORS



This product is to be used only by persons familiar with its use. It must be maintained within the stated limitations. All sales are subject to Seller's terms and conditions. Purchaser assumes all responsibility for the suitability and fitness for use as well as for the protection of the environment and for health and safety involving this product. Seller reserves the right to modify this document without prior notice. Check with your representative to verify the latest update. To the best of our knowledge the information contained herein is accurate. However, neither Seller nor any of its affiliates assumes any liability whatsoever for the accuracy or completeness of the information contained herein. Final determination of the suitability of any material and whether there is any infringement of patents, trademarks, or copyrights is the sole responsibility of the user. Users of any substance should satisfy themselves by independent investigation that the material can be used safely. We may have described certain hazards, but we cannot guarantee that these are the only hazards that exist.

Liqui-Cel, Celgard, SuperPhobic and MiniModule are registered trademarks and NB is a trademark of Membrana-Charlotte, A division of Celgard, LLC and nothing herein shall be construed as a recommendation or license to use any information that conflicts with any patent, trademark or copyright of Seller or others.

©2009 Membrana – Charlotte A Division of Celgard, LLC SU3-rev6_MiniModule Start-up_04-08

SERVICE QUESTIONS: Contact your OEM or your Membrana representative.

Membrana - Charlotte
A Division of Celgard, LLC
13800 South Lakes Drive
Charlotte, North Carolina 28273
USA
Phone: (704) 587 8888
Fax: (704) 587 8610

Membrana GmbH
Oehder Strasse 28
D-42289 Wuppertal
Germany
Phone: +49 202 6099 -658
Phone: +49 6126 2260 -41
Fax: +49 202 6099 -750

Japan Office
Shinjuku Mitsui Building, 27F
1-1, Nishishinjuku 2-chome
Shinjuku-ku, Tokyo 163-0427
Japan
Phone: +81-3-5324 3361
Fax: +81-3-5324 3369

www.liqui-cel.com

MiniModule®
MEMBRANE CONTACTORS

START - UP PROCEDURES
for MiniModule®

- 1 x 5.5
- 1.7 x 5.5

MEMBRANA
A POLYPORE Company

For a full version of the Operating Guide go to www.liqui-cel.com


Steps:

1. Identify your mode of operation. Three options are available: sweep, vacuum, or combo, as shown in the three flow diagrams below. Vacuum only is most common for debubbling applications.
2. Mount contactor vertically or horizontally with gas ports pointing down.
3. Refer to start-up procedures below for each mode of operation.

NOTES:

- At a minimum, incoming fluid should be prefiltered at 10 µm.
- Upon initial start-up, flush all pipes to drain prior to introducing water into the contactors.
- Carefully read the Liqui-Cel Operating and Cleaning Guides.
- The vacuum pump and/or sweep gas should be on at all time unless the contactors are completely drained.
- Liquid Flows on the Lumenside in MiniModule Contactors.

CONTACTOR OPERATING MODES

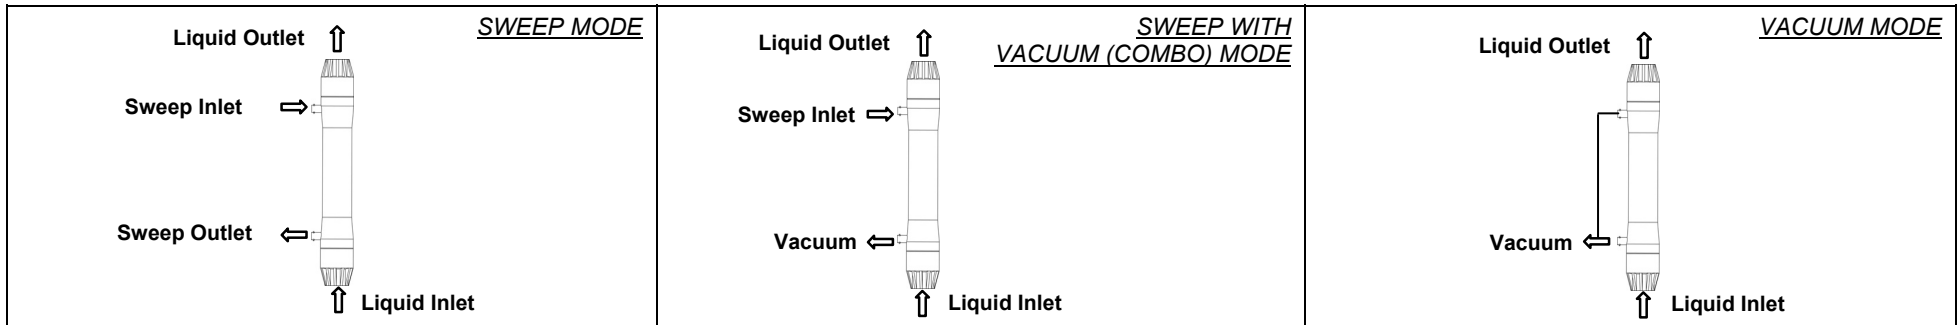

A. General start-up instructions for the liquid phase

Note: Both gas/vacuum ports should not be closed off during operation.

1. Slowly introduce water to the system, making sure that the water inlet pressure and water flow rate through the contactor never exceed the respective maximum operating limits: Max Pressure: 4.1 bar, 20° C (4.2 kg/cm², 60 psig, 68° F). Max Flow: 1 x 5.5 – 500 ml/min, 1.7 x 5.5 – 2500 ml/min.

Note: Liquid flows on the lumenside.

2. Adjust water flow rate and inlet pressure to the desired levels by adjusting the appropriate valves on the system.

B. Start-Up Instructions for strip gas and vacuum phase

Note: Vacuum, when used in combo mode, should always be pulled from the lowest gas port to facilitate draining of any liquid condensate and ensure performance.

Sweep Gas Mode

Note: Sweep gas should be introduced at the top shell port.

1. Set the pressure entering the contactor at ≤ 10 psig (0.69 bar, 0.7 kg/cm²) by adjusting the appropriate valve in the gas delivery system.
2. Set the recommended total sweep flow rate by adjusting the appropriate valves. See the sweep guidelines for typical sweep gas flow rate ranges in the table to the right.
3. Introduce sweep gas into each contactor.

Note: If using compressed air, make sure it is oil free and air temp < 20°C. A 0.2 micron filter is recommended with any gas. The liquid pressure should always be higher than the gas phase pressure inside the contactor.

Sweep Gas with Vacuum (Combo) Mode

1. Set the pressure entering the contactor at ≤ 1 psig (0.07bar, 0.07 kg/cm²) by adjusting the appropriate valve on the gas delivery system.
2. Set the recommended total sweep flow rate by adjusting the appropriate valve. See sweep guidelines for typical sweep gas flow rate ranges in the table below.
3. Introduce sweep gas into each contactor. **NOTE:** If using compressed air, make sure it is oil free and air temp < 20°C. A 0.2 micron filter is recommended with any gas.
4. Apply vacuum as described in the vacuum section below.

	Sweep Guidelines for Sweep Mode	Sweep Guidelines for Combo Mode
1 x 5.5	0.05 – 0.5 scfm (0.085 – 0.85 m ³ /hr)	0.01 - 0.1 scfm (0.016 – 0.16 m ³ /hr)
1.7 x 5.5	0.1 – 1.0 scfm (0.17 – 1.7 m ³ /hr)	0.02 – 0.2 scfm (0.034 – 0.34 m ³ /hr)

Vacuum Only Mode

1. Start vacuum pump following vacuum pump manufacturer's instructions.
2. Apply vacuum to the contactor by opening appropriate valve. You may pull vacuum from both shellside ports of the MiniModule or block off the top port and pull vacuum from the bottom port only.
3. Adjust absolute gas pressure on the vacuum side to the desired level at the vacuum port on the contactor.